
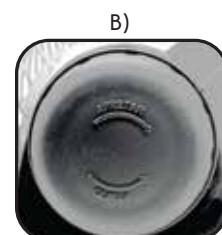


OPERATION

1. The speed selector is located at the back of the appliance. The 1 knob includes: 0 (off), 1, 2, 3 (speed levels). (See item A).
2. Connect the power plug into an electrical outlet.
3. Adjust airflow direction by slightly loosening the side knobs, selecting the desired angle, then tightening firmly. (See item B).
4. The fan features a 3-speed selector. Speed 3 is the highest, decreasing power at 2 and 1.
5. Disconnect the unit before moving it to another location.

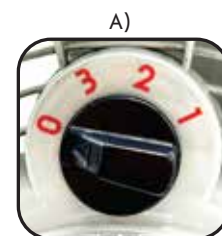

SAFETY PRECAUTIONS AND WARNINGS

1. For indoor use only.
2. Place the appliance on a flat, stable surface.
3. Do not use the fan without its blade grilles properly installed.
4. Keep the fan away from curtains and other objects to avoid damage.
5. Do not use this product in areas where gasoline, paint or other flammable goods and materials are used or stored.
6. Do not cover the air inlet or outlet of the appliance.
7. When the appliance is not in use, store it in a dry area away from direct sunlight, extreme temperatures, humidity and other harsh environments.
8. Do not insert objects into the grille or blade area.
9. Do not touch the fan blade while it is moving.
10. Keep hot objects away from the fan.
11. Always tighten the knobs once you have set the desired airflow angle.
12. Use authorized service centers for any servicing.
13. Children should be supervised to ensure that they do not play with the appliance.
14. This appliance should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
15. Never immerse the fan in water or any other liquids.
16. Do not use the appliance in standing water.
17. Do not touch the appliance or plug with wet hands or while standing in water.
18. Be careful not to trip over the power cord.
19. When unplugging, hold and pull the plug, not the cord.
20. Unplug the power cord from the outlet before cleaning the appliance.
21. Do not place the cord under carpeting. Do not cover the cord with rugs, runners or similar coverings, and do not route it under furniture or appliances. Arrange the cord away from traffic areas so that it will not be tripped over.
22. To reduce the risk of fire or electric shock, do not use this appliance with any solid-state speed control device.
23. Never use the fan with a damaged power cord.
24. If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified personnel in order to avoid a hazard.

MAINTENANCE

1. Disconnect the power plug before cleaning. Use a cloth dampened with mild soap. (See item A) Do not use abrasive materials.
2. Never use solvents such as alcohol, gasoline, or aerosol they can damage the fan's parts. (See item B).
3. Do not add oil to the motor; it has a permanent lubrication system.
4. For fan repairs, please contact an authorized service center to receive specialized technical assistance.

