

OPERATION

1. To turn the fan on or off, press the Power button on the control panel.
2. To adjust airflow speed, press Vel + to increase the speed or Vel - to decrease it.
3. To activate side-to-side movement, press the Osc button to enable automatic oscillation.
4. The fan includes a timer. Press the Timer button to schedule automatic shutoff from 1 to 8 hours.
5. For greater comfort at night, activate Night Mode, which reduces both noise and airflow intensity for a more restful environment.

SAFETY PRECAUTIONS AND WARNINGS

1. For indoor use only.
2. Never immerse the fan in water or other liquids.
3. Do not insert objects through the grilles or near the blade.
4. Do not touch the blade while it is moving.
5. Children must be supervised to ensure that they do not play with the appliance.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or by persons lacking experience or knowledge, unless they receive supervision or instruction.
7. Keep hot objects away from the fan.
8. Do not pull the plug out by the power cord when disconnecting the appliance.
9. Never use a damaged power cord.
10. Take care not to trip over the power cord.
11. Do not use the product in areas where gasoline, paint, or other flammable materials or objects are used or stored.
12. Use Authorized Service Centers for service or repairs.
13. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or qualified personnel in order to avoid a hazard.
14. Place the appliance on a flat surface.
15. Disconnect the power cord from the electrical outlet before cleaning.
16. Do not operate the fan without the blade grilles installed.
17. Keep the fan away from curtains to prevent damage.

MAINTENANCE

1. Unplug the power cord before cleaning the unit. To remove the front grille, release the lower safety clip (use a flat screwdriver if necessary to gently pry between the band and the clips) until it is disengaged, then slide it upward to release the upper clip. To remove the blades, release the blade by turning it in the direction marked remove, then remove the blades. Remove the rear grille by removing the nut. Clean the grilles and blades with a cloth dampened with mild soap and water. Do not use abrasive materials that could damage the finish. To reassemble, follow the assembly instructions on the first page.
2. Never use solvents such as alcohol, gasoline, or aerosol cleaners, as they may damage fan components.
3. The motor does not require additional oil. It is equipped with a permanently lubricated system.
4. For repairs, contact an Authorized Service Center for specialized technical assistance.

