

OPERATION

1. Never leave the cooker unattended while on heat.
2. Keep out of reach of children.
3. Use only for cooking (do not fry or bake).
4. Children must be supervised to ensure they do not play with the product or its accessories.
5. The appliance should not be used by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless supervised or properly instructed.



Handling and Opening

1. Move with care: Always lift the cooker by the handles. Do not touch the metal surface without protection.

2. Correct closing: Ensure the lid is properly closed before turning on the heat.



3. Never force open: Release all pressure before opening the lid.

4. Shake before opening: If cooking soft foods, shake gently before opening to avoid splashes.



SAFETY PRECAUTIONS AND WARNINGS

1. Pre-use check: Make sure the pressure valve, gasket, lid, and body are clean and unobstructed.
2. On induction cooktop: Monitor temperature carefully.
3. On gas stove: Flame should not extend beyond the sides of the pot.
4. Do not use oversized electric grills.
5. Maximum recommended power: 2 kW.
6. Never heat empty: Do not place the pot empty on heat to avoid serious damage.
7. Do not store food in the cooker for long periods.



Additional precautions

Steam direction: Never point the safety valve toward yourself or others.

Safe transport: Carry horizontally, avoid impacts, and place carefully.

Maintenance: Do not modify safety components. Use only original manufacturer spare parts.

Cleaning: Clean and dry after each use to extend product life. Keep this manual accessible.

MAINTENANCE

* Maintenance of the entire cooker:


- Clean any dirt.
- Dry the cooker well and store it in a dry place.
- Do not scrape the surface of the cooker with hard materials such as metal to avoid abrasion.
- Do not store food inside the cooker for long periods of time.
- Avoid contact with other metals to prevent electrochemical corrosion.

* Gasket maintenance:

- Remove the gasket from the lid. Wash the gasket and lid with hot water or mild detergent.
- Dry the gasket thoroughly and store it in a dry place.
- Reinstall the gasket into the lid. Do not use the cooker without the gasket to avoid deformation. Keep it separate from the lid and body when not in use.

* Pressure limiting valve and steam exhaust pipe maintenance:

- Check that the steam release tube is not blocked.
- If blocked, clear it with a needle, then wash and rinse with water.
- To disassemble the valve: Pull the pressure limiting valve upward with some force until it comes out.

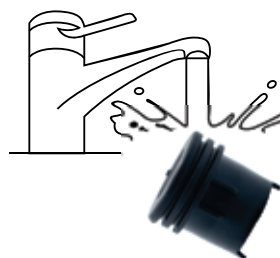

* Precaution: Changes in gasket color are not problematic. It is recommended to replace the gasket every 1-2 years depending on frequency of use, or immediately if damaged or deformed. Contact your distributor or our sales department for replacement parts. Never use non-original parts.

How to store the cooker: Store the body and lid separately, in a cool and shaded place.