
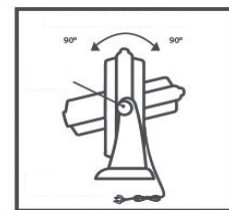


OPERATION

1. The speed selector is located on the back of the appliance. The knob has position 0 (OFF) and speed settings 3, 2, and 1.
2. Insert the polarized power plug into a suitable electrical outlet.
3. Adjust the airflow direction as needed. Slightly loosen the side knobs, set the desired angle, and then tighten the knobs securely.
4. The fan has three speed settings to deliver different airflow levels. Speed 3 provides the highest power, with lower airflow at speeds 2 and 1.
5. The fan is an excellent supplement to air conditioning and helps reduce energy use. It operates quietly.
6. Unplug the fan from the electrical outlet before moving it to another location.

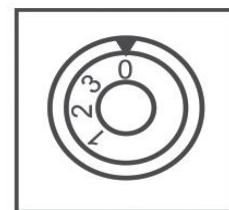

SAFETY PRECAUTIONS

1. For indoor use only.
2. Never immerse the fan in water or any other liquid.
3. Do not insert objects through the grilles or near the fan blade.
4. Do not touch the blade while it is moving.
5. Children must be supervised to ensure that they do not play with the appliance.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or by persons lacking experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance.
7. Keep hot objects away from the fan.
8. When disconnecting the fan, grasp the plug and pull it from the outlet.
9. Never use the fan if the power cord is damaged.
10. Take care to avoid tripping over the power cord.
11. Always tighten the side knobs after setting the desired airflow angle.
12. Use authorized service centers for service or repairs.
13. If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or qualified personnel in order to avoid a hazard.
14. Place the appliance on a surface.
15. Unplug the power cord from the electrical outlet before cleaning the appliance.
16. Do not operate the fan without the blade grilles installed.
17. Keep the fan away from curtains to prevent damage.

MAINTENANCE

1. Unplug the power cord before cleaning the unit. Wipe the fan with a cloth dampened with mild soap and water. Do not use abrasive pads or materials that could damage the finish.
2. Never use solvents such as alcohol, gasoline, or aerosol cleaners, as they may damage fan components.
3. The motor does not require additional oil. It is equipped with a permanently lubricated system.
4. For fan repairs, contact an Authorized Service Center for specialized technical assistance.

